

20


Error display : *E 54*

[Defective low pressure and high pressure sensor]

7-segment display : *E 54-1**E 54-2*

Indoor unit		Outdoor unit	
Red LED	Stays OFF	Red LED	1 time flash ⁽¹⁾
Green LED	Keeps flashing	Green LED	Keeps flashing

Note (1) Flashing once when the low-pressure pressure sensor is defective.
Flashing twice when the high-pressure pressure sensor is defective.

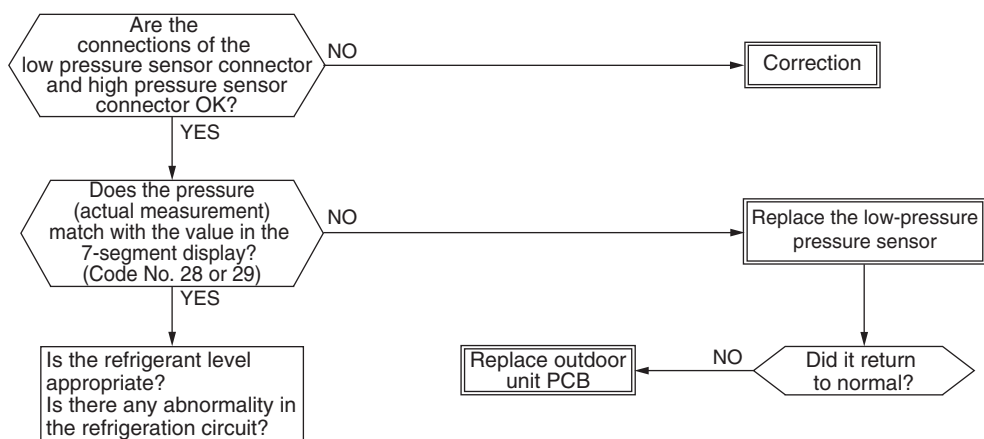

21

Error display : *E 59*

[Anomaly in compressor starting]

7-segment display : *E 59-1**E 59-2*

Indoor unit		Outdoor unit	
Red LED	Stays OFF	Red LED	1 time flash ⁽²⁾
Green LED	Keeps flashing	Green LED	Keeps flashing

Notes (1) Check if the power supply system is normal.
(2) Single flashing of outdoor unit LED indicates abnormalities in compressor (CM1) starting and double flashing indicates abnormalities in compressor (CM2) starting.

